



Digital Photo Frame User's Manual



Questions? Need Some Help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit
www.polaroid.com/support.

20080418

Important Safety Instructions

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Note: Do not touch the color TFT LCD screen.

Proper Handling of the Digital Photo Picture Frame

Always handle the Digital Photo Picture Frame carefully. Avoid touching the LCD screen as natural skin oils are very difficult to remove.

Always position the Digital Photo Picture Frame on a stable and level surface. Unstable surfaces can cause the Digital Photo Picture Frame to topple and fall, resulting in possible damage or injury.

Avoid exposing the Digital Photo Picture Frame to direct sunlight or high temperatures, which can damage or shorten its life. Do not place the unit near heat sources such as radiators, heat registers, or other appliances that generate heat. Orient the Digital Photo Picture Frame away from direct sunlight to reduce glare.

Avoid exposing the Digital Photo Picture Frame to rain, water, moisture or high humidity. Do not place it in a bathroom or kitchen near a sink or where it may come in contact with water.

Never place heavy or sharp objects on the LCD panel, frame, or power cord.

Overloading Outlets

Do not overload electrical power sources when using the Digital Photo Picture Frame. Overloading wall outlets, circuits, or extension cords can result in overheating, fire, or electric shock. Use only grounded or polarized outlets.

Power Cord Protection

To minimize wear on the power supply cord, the power supply cord should be routed away from foot traffic and contact with other objects. Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged.

Ventilation


Slots and openings on the Digital Photo Picture Frame are provided for ventilation purposes. To ensure proper ventilation and reliable operation of the product do not place Digital Photo Picture Frame on a bed, sofa, rug or similar surface. Do not place it in an enclosed space such as a bookcase, unless proper ventilation is provided.

Controls and Basic Instructions

CONGRATULATIONS on your purchase of your Polaroid Digital Photo Frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings may result in personal injury or damage to the device. Remember to keep this User's Manual in a convenient location for future reference.


Important: Save the original box and all packing material for future shipping needs.

Controls

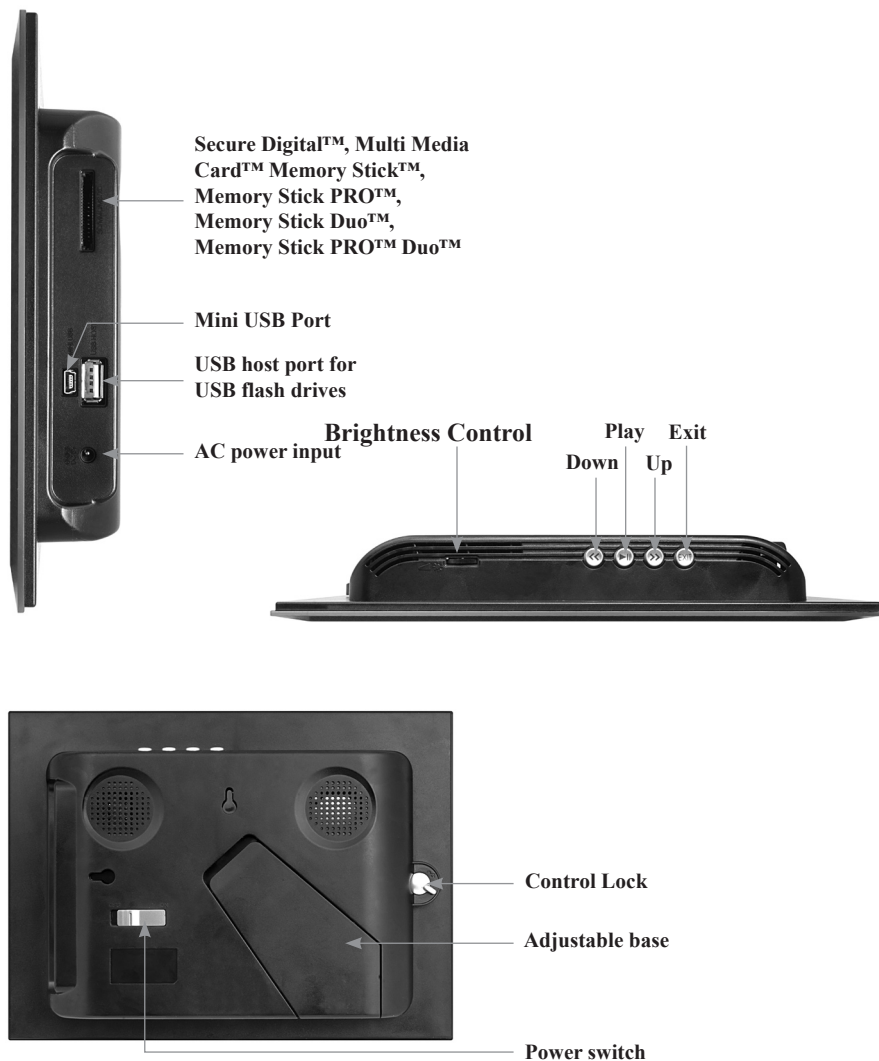

Remote Control


Remote Control

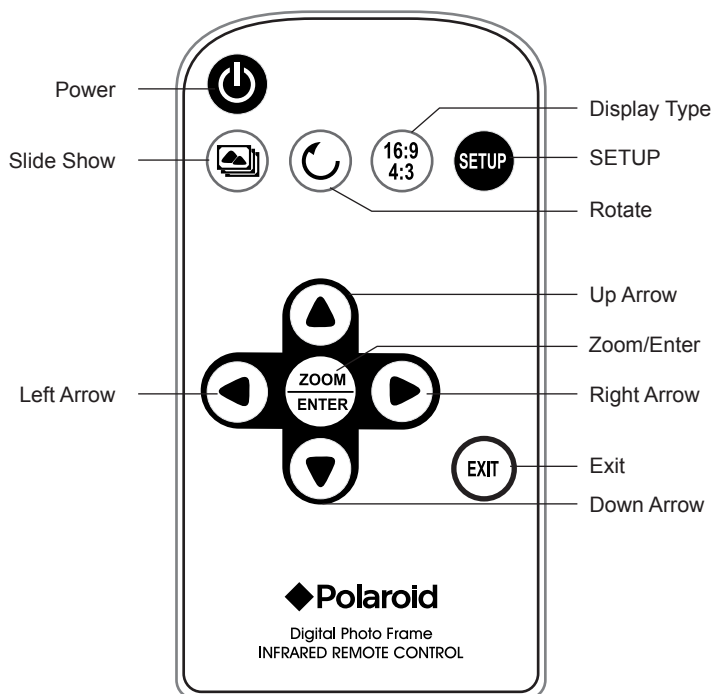

Quick Start

Quick Start Instructions

1. Plug the AC adapter into the Digital Photo Frame and plug it into a wall outlet.
2. Insert a memory card into the slot or insert peripheral USB equipment into USB host.
Memory cards that can be used in this device are: Secure Digital™, MultiMedia Card™, Memory Stick™, Memory Stick Duo™
3. Turn on the Power Switch located on the back of the Digital Photo Frame.
4. Once the Digital Photo Frame has been turned on, the unit will enter the “Select Card” page automatically.

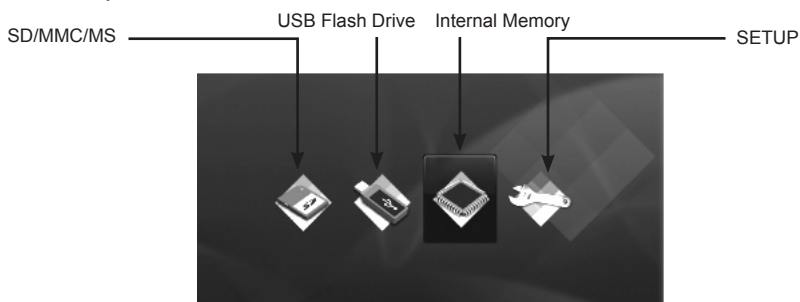

Select Card Page


5. Press the >> or << button to select a type of memory card and press the Play ► button to enter Photo mode. Thumbnails of your images will be shown on the screen.
6. Press the EXIT button to go back to the “Select Card” page.
7. Using the procedure in Step 5, press the >> or << button to select a picture and press the Play ► button to view it in full screen. Press the EXIT button to go back.
8. When viewing a picture, press the Play ► button again to enlarge the current picture. Press the EXIT button to return to thumbnail mode.
9. On the “Select Card” page, press the >> or << button to select the SETUP mode and press the Play ► button to enter. Press the >> or << button to scroll to the “LANGUAGE” option, press ► button to enter its submenu (the screen will flicker). Press the >> or << button to select a language you prefer and press ► button to confirm your selection. In the SETUP mode, you can also setup “Slideshow Time”, “Display Mode”, “Transition Effect”, “Reset Settings” and “Auto Slide show Setting”.

Notes:

1. When there is no memory card in the unit, pressing the slideshow button will play the demonstration images. For more details, please refer to “Demo Slide Show” on page 8.
2. You may use the remote control to perform the above functions. Press the ► or ◀ button to scroll forward or backward, Press the ▲ or ▼ button to scroll up or down, and press ENTER/ZOOM button to enter, play or confirm your choice. Press the EXIT button to go back.

Controls and Basic Instructions

Buttons on the Remote Control

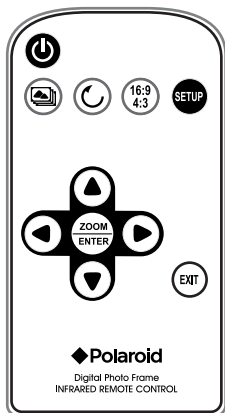

POWER BUTTON---Press to power on or off.

SLIDE SHOW BUTTON---Press to start/stop a photo slideshow

ROTATE BUTTON---Press to rotate photos 90 degrees clockwise on screen

DISPLAY BUTTON---Press to change from 4:3 to 16:9 and back

SETUP BUTTON---Press to set up system parameters

ENTER / ZOOM BUTTON---Press to confirm your selection and play still images or press to zoom in to 16x for a selected picture.

▲ BUTTON---Press to move up when selecting files on your screen.

◀ BUTTON---Press to move left when selecting files on your screen.

▶ BUTTON---Press to move right when selecting files on your screen.

▼ BUTTON---Press to move down when selecting files on your screen..

EXIT BUTTON---Press the exit button to go back to previous menu.

Controls and Basic Instructions

Control Button Functions

All function settings for your Digital Photo Frame can be controlled via the buttons located on the top of the frame. You can access the setup menu by either using the remote control or pressing the >> or << button on the frame and highlight the wrench icon. Press the ►II button.

OSD Menus	Sub-Menus	Description
<i>Slideshow Time</i>	<i>3 seconds 5 seconds 15 seconds 1 minute 15 minutes 1 hour</i>	<i>Determines how quickly the next photo is displayed</i>
<i>Display Mode</i>	<i>4:3 16:9</i>	<i>Definitize the display size for your photo changed from 4:3 to 16:9 or back.</i>
<i>Transition Effect</i>	<i>Off Bottom to top Top to bottom Left to right Right to left Door close Door open Horizontal cross Vertical cross Random Fading Vertical expand - top Vertical expand - bottom Vertical expand - middle</i>	<i>Select style of transition</i>
<i>Reset Settings</i>		<i>Restore settings to default values</i>
<i>Language</i>	<i>English Italian German French Spanish Portuguese Dutch Polish Russian</i>	<i>Multiple languages</i>
<i>Auto Slide show Setting</i>	<i>Off 30 Seconds 60 Seconds</i>	<i>The slide show will run automatically after the time is selected.</i>

Controls and Basic Instructions

Control Button Functions - continued

To access the Setup mode

Button	Command
<<	Up
►II	Select
>>	Down
EXIT	Exit OSD Menu

Viewing Pictures Individually

Button	Command
<<	Previous Picture
►II	Zoom in the Select Picture
>>	Next Picture
EXIT	Press to return to the thumbnail mode.

Select Card Page

Button	Command
<<	Left
►II	Enter the submenu
>>	Right
EXIT	Back to "Select Card" Page

Demo Slide Show

Some demo pictures have been loaded into your Digital Photo Frame. These pictures can be viewed without inserting any memory cards. Power on the Digital Photo Frame, and after a few moments, the demo slide show will run automatically.

Connecting a USB Device to the Digital Photo Frame

Your Digital Photo Frame has a built-in USB port. Using a USB cable (not included) and your digital camera or a USB flash drive, you have the ability to view images directly from the USB source.

1. Connect the AC adapter to the Digital Photo Frame and slide the power switch to the "on" position.
2. Connect one end of a USB cord to a USB device such as a digital camera or USB flash drive, and the other end to the Digital Photo Frame.
3. Once the Digital Photo Frame has recognized the USB source, you will be able to view all the pictures on the camera's internal memory, its memory card, or a USB flash drive.

Connecting your Digital Photo Frame to a computer


Using the supplied USB cable, you can connect your digital picture frame to a computer to transfer files between the two devices.

With the frame turned off, connect the small end of the cable to the frame and the large end to your computer. Turn the frame on and allow the computer a few moments to recognize the device. The frame's internal memory and any memory cards inserted in the frame will appear as external storage devices on the computer. Click on "Open folder to view files". You may add or delete any photos from the internal memory of the device or memory cards from here.


Changing Picture Frames

Changing picture frames is easy as 1-2-3:


1. Locate the lock on the side of the back cover. Slide the lug toward in the direction as illustrated, to release the back cover from the frame.

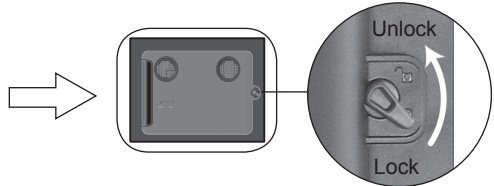

2. Lift the back cover and gently pull it from the two slots on the other side of the frame.

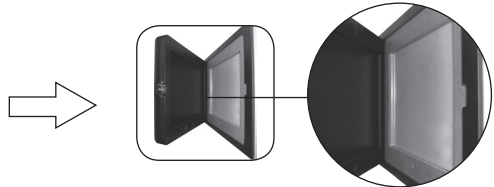

3. To reattach a new frame, simply hold the back cover at a slight angle, then insert the two wedges on the other side of the back cover into the matching slots of the frame. To lock it into place slide the lug to the "LOCK" position.

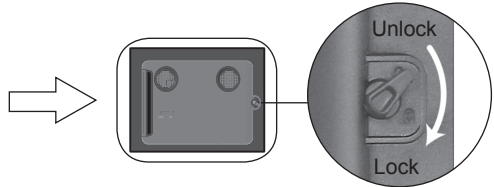

Frequently Asked Questions

Frequently Asked Questions(FAQ)

Q : What other media formats can the Digital Photo Frame support? Why will it not play all images?

A : The Digital Photo Picture Frame will support JPEGs taken from a digital camera. The Digital Photo Picture Frame may not read all images.

Q : I have a memory card in the Digital Photo Frame, but it's not reading the card. What should I do?

A : First, make sure that you are using a memory card that is supported by the Digital Photo Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, press the EXIT button until you reach the "Select Card" page. If the memory card is properly inserted into the slot, that memory card icon will be highlighted.

Note: Some digital cameras save images into non-standard formats. Please refer to your camera's operating manual for specifics.

Q : Why do some pictures load faster than others?

A : Higher resolution pictures load slower. Using a lower resolution when taking pictures speeds loading time.

Technical Specifications and Recycling

Technical Specifications

Product: 7" LCD Screen Digital Photo Picture Frame
Resolution: 480 x 234 pixels
Input Formats: Secure Digital™, Multi Media Card™, Memory Stick™, Memory Stick Duo™

Questions? Need some help?

Call our help line found on the insert with this icon:



Or visit www.polaroid.com.



RoHS

WEEE:

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to **www.polaroid.com** and click on "**Company**" or call the customer service number for your country listed in the instruction manual.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation.
For service, support and warranty information, visit www.polaroid.com.

Part No.:OM6096US001
Printed in China